



FIRST-CARE


RUBBER HEAT MAT FOR NEWBORN PIGLETS

- Prevents undercooling
- Greater chance of survival - 0,2 more live pigs per litter
- Healthier pigs that recover faster after farrowing
- Mobile and easy - can be placed and removed again
- Non-slip surface
- Easy to clean and disinfect



I FIRST CARE® RUBBER HEAT MAT I

For use during farrowing - the best start for newborn piglets

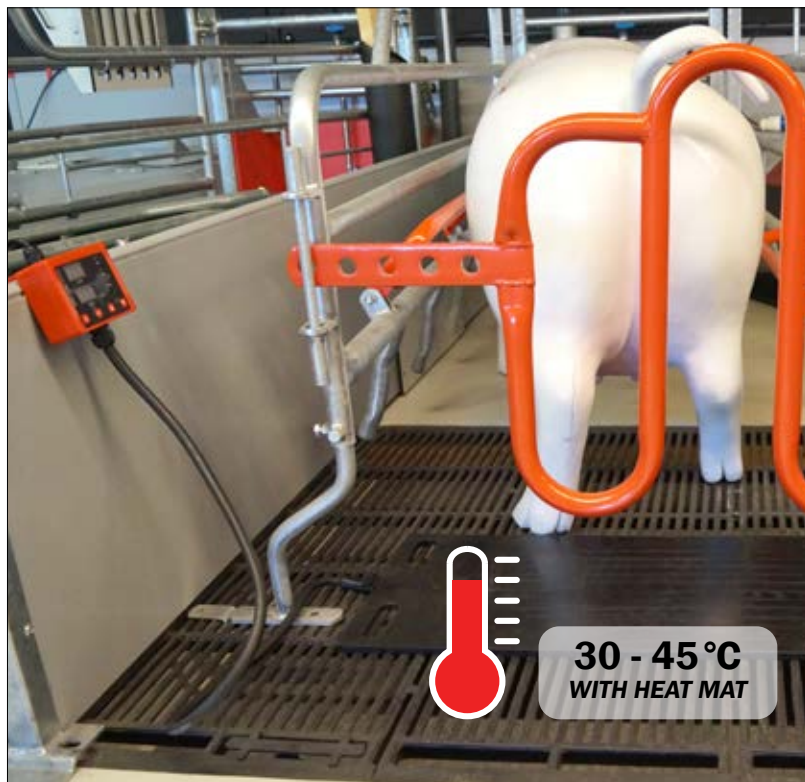

GREATER SURVIVAL CHANCES


Without the FIRST-CARE mat, the very first bedding for the newborn piglets is down to about 11 °C.

With the FIRST-CARE mat it is approx. 36-38 °C, and can be adjusted up to 45 °C. The piglets get a more gentle start to life, thus having greater survival chances.

FIRST-CARE is a heat mat, which is placed behind a sow during the farrowing, so the piglets are born to a mat that is approx. 39 °C warm.

With the heat mat, the newborn piglets get more optimal life start, as the risk of undercooling is reduced. It is expected that the survival rate for newborn piglets will increase by 0,2 piglets per litter (based on the first statistical experience).

After farrowing, remove the First-Care mat.

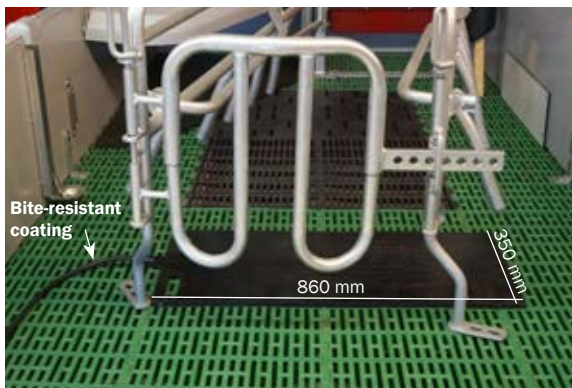

FIRST-CARE RUBBER MAT:	
Dimensions	350 x 860 x 10 mm
Connection	220 V
Energy consumption	320 W
Temperature	Default 39°C. Adjustable 30-45°C
Features	Ergonomic handles for easy placement
Cable	L=4,5 m, bite-resistant coating near the mat

TIMER	
Features	Built-in holder for placing on the partition
Start / stop	Possible to set delayed start
Running time	Can run all the time or for time-limited period



Subject to changes in materials and design is reserved.

B-8510-GB